

FROG POD.®

- + Bath Toy Scoop, Drain & Storage
- + Rangement et égouttoir pour jouets de bain
- + Juguete de baño para recoger, secar y almacenar de los juguetes
- + Zum Herausschöpfen, Abtropfen lassen und Aufbewahren von Badewannenspielzeug

Instructions

Instructions

Instrucciones

Anleitung



boon®

⚠️ WARNING

- Prior to installation, remove all internal packaging materials and fasteners and discard properly.
- The Frog Pod is not a toy!
- NEVER leave child unattended when bathing.
- This product should ALWAYS be used ONLY under adult supervision.
- NEVER apply excessive force to or allow children to hang from the Frog Pod.
- ALWAYS position the product on the lower portion of the bath wall.

⚠️ CAUTION

- Adult assembly required. Tools required (not included): Rubbing alcohol.

MOUNTING INSTRUCTIONS

Thank you for purchasing a Boon Frog Pod. In order to hang your Frog Pod, you must first secure the enclosed bracket to your bath wall.

The enclosed bracket includes three adhesive strips. This durable adhesive is designed to withstand moisture. This adhesive forms a semi-permanent bond on most tile, glass, and fiberglass surfaces and will hold up to 6 lbs. The adhesive can be removed without harming the wall surface. Adhesive strips can only be used once. For replacement adhesive strips or questions, please visit booninc.com.

IMPORTANT!

FOLLOW INSTRUCTIONS CAREFULLY! The adhesive strips will NOT stick to the bath wall if you do not follow each step of the instructions.

The adhesive strips will not stick to silicone-based tile sealants. DO NOT load the Frog Pod with more than 6 lbs of toys and accessories.


NOTE: When using the adhesive strips, it is very important that you place the bracket onto the wall in its proper position ONLY ONCE. After the adhesive strips are placed on the wall, DO NOT try to remove and reposition the bracket as this will prevent the adhesive strips from adhering to the wall.

To attach bracket to the bathtub/shower wall, select an area where strips are touching the least amount of grout. If adhesive strips cross grout lines, be sure to firmly press adhesive into recessed areas.

It is important to maintain a wall surface temperature above 70°F from the time you first place the adhesive strips onto the wall and throughout the entire 24 hour period before attaching the base. If you are mounting the adhesive strips on an exterior wall during cold weather, it may be necessary to increase the room temperature during this time.

When placing the bracket onto the cleaned wall surface, use thumb to press firmly over each of the adhesive strips. Rub while pressing to remove any air bubbles between adhesive strips and wall surface.

STEPS:

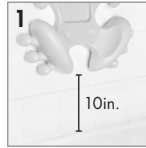

Select a mounting location on the lower portion of the wall. Leave a minimum of 10in. between the bottom of the bracket and any edge or raised surface of the bathtub.



THOROUGHLY clean dirt and residue from mounting area. Be certain that you clean the entire area where the adhesive strips will be attached.



Next, VIGOROUSLY wipe area with rubbing alcohol using a clean cloth.



Let dry fully for AT LEAST 10 minutes.



Remove backing from all adhesive strips. DO NOT TOUCH ADHESIVE. Hold bracket by its EDGES ONLY.



Make sure hook is in the upward position and level. Place bracket onto the cleaned area for mounting and be certain that ALL adhesive strips are pressed firmly against the wall. Press FIRMLY for 30 seconds.



Allow bracket to remain in place for AT LEAST 24 HOURS before attaching the base. It is important to maintain a room temperature of 70°F or above throughout the entire 24 hour period. Also, avoid moisture and the use of cleaning chemicals near the wall bracket during the 24 hour period.



To attach base to bracket, fit slot over bracket hook and snap down into place.

REMOVING THE ADHESIVE STRIP BRACKET

To remove the adhesive strip bracket, use a flat object, such as a screwdriver or a butter knife (covered with a soft cloth to avoid scratching the wall surface) to pry up one of the adhesive strips. After loosening the first strip, rotate the bracket to release the remaining strips. Any adhesive residue remaining on the wall can be pulled off easily.

USING THE SCOOP

To attach the scoop to the base, simply fit slot over hook and hang in place. To remove scoop, lift up then off the hook.

CLEANING & CARE

Remove Frog Pod base from the wall bracket by first holding the bracket securely in place on the wall, then pulling the base up and off the bracket hook. Clean base and scoop with warm water and mild soap.



© 2015 BKD
(A DIVISION OF TOMY • DIVISION DE TOMY)
1241 W WARNER RD, SUITE 101
TEMPE, AZ, USA 85284
FOR US AND CANADIAN CUSTOMERS CALL:
POUR LES CLIENTS DES ÉTATS-UNIS
ET DU CANADA: 888.376.4763
BOONINC.COM

TOMY EUROPE
HEMBURY HOUSE, EXETER, EX2 5AZ, UK



Consumer: Please retain this packaging for future reference. Actual product styling and colors may vary. Trademarks and copyrights are exclusively owned by BKD. Made in Mexico.

Au consommateur: conservez cet emballage pour référence. Le style et les couleurs actuelles peuvent changer. Marques déposées, copyrights et designs sont les propriétés exclusives de BKD. Fabriqué en Mexique.

Consumidor: Conserve la caja para referencia futura. El estilo y los colores reales del producto pueden variar. Las marcas comerciales y los derechos de autor y los diseños son propiedad exclusiva de BKD. Fabricado en México.

Kunden: Bitte bewahren Sie die Verpackung für zukünftige Bezugnahme auf. Ausführung und Farben des tatsächlichen Produkts können abweichen. Die Marken und Urheberrechte sind ausschließliches Eigentum von BKD. Hergestellt in Mexiko.